
Learning code pairing: the receiver will be connected to the power, long press the "volume button" 3 seconds after you hear "ding dong, ding dong" two sounds into the pairing mode, it will need to pair the transmitter with the receiver to broadcast, after the receiver will issue ". If there is no successful reception or no transmitter signal appears within 5 seconds, the pairing mode will automatically exit.

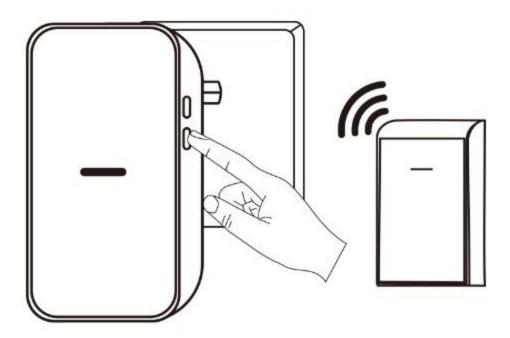

Clear code pairing: If the receiver is disconnected, press and hold the "volume control button", then turn on the power until you hear "bim bam, bim bam", then release your hand to clear all the code pairings in the device, then all the transmitters will disabled and will need to be re-paired.

